



HOW TO FLEXIPOINT YOUR ROOF

4 steps to success

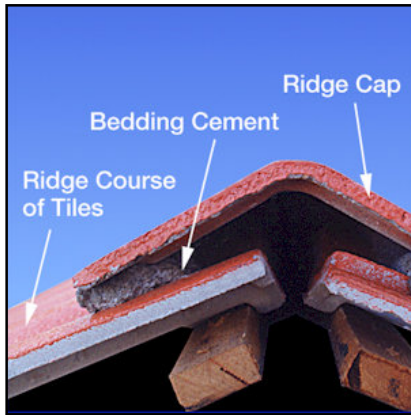


Bedding cement should be fully trowelled, finished plumb and free of large holes & voids, ensuring no bedding cement residue is left on the edge of the ridge cap interface.

Flexi-point may be applied over a fully cured bedding, or it can be applied over a wet (just laid) bedding – however allow for additional curing time in this situation.

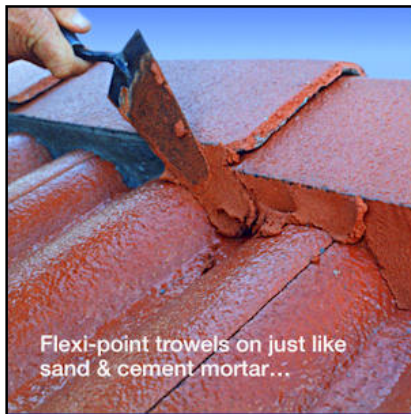

Use Flexi-point straight from the bucket. Nothing to add, just stir before using. (It freshens up the mix).

Using a round nose pointing trowel, apply the Flexi-point to the bedded top ridge cap tiles, hip cap tiles, ridge cap collars and gable ends (if required).

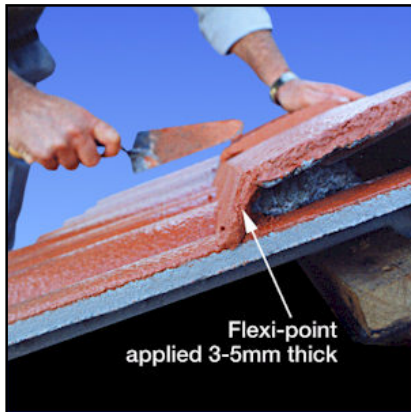

Flexi-point should be trowelled on at a uniform thickness of 3 mm to 5 mm, over a recommended 4:1 yellow brick sand/ cement bedding mix.



Smooth off the Flexi-point to beautiful steeled finish for that professional appearance.

Complete the application by inserting the weep holes once product has cured off sufficiently.